Blender

HR 2849

Service
Service
Service

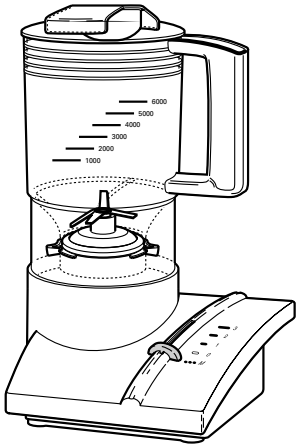

Philips Domestic Appliances and Personal Care

ServiceManual

Product information

HR 2845 = Blender with jar
HR 2849 = HR 2845 with HR 2934

Optional:

HR 2924 = Mill	see Service Manual 4822 729 21479
HR 2926 = Chopper	see Service Manual 4822 729 21481
HR 2934 = Filter	see Service Manual 4322 277 00070

Type no.:
HR 2845/AM means first version and production centre is Mexico; HR 2845/AB means first version and production centre is Brazil.

Safety system	: The blender operates only if the jar, mill or chopper is correctly placed on the drive unit.
Safety cap	: The cap locks the lid to the jar in order to avoid spillage.
Cord storage	: It allows control of the cordset length.
Switch	: 3 speeds with pulse position in the max position (slide control).
Power consumption	: 400 W
Dimensions lxhxw	: 18.5 x 38.5 x 17 cm.
Volume jar	: Effective 1.5 and total 2.0 litre.
Cleaning	: Do not clean the parts in a dishwasher.

Product meets the requirements regarding interference suppression on radio and TV.

Service Information

Safety device.
The appliance can only be operated if the jar (item 23) is placed on the body of the appliance so that the safety interruptor (item 10) located inside the appliance is activated by means of a shaft (item 9).

Knife assy.
To remove the knife assy (item 17) from the jug (item 23) turn the knife assy clockwise).

Disassembly of the appliance.
Loosen the two screws to be able to remove the base from the appliance. Then undo the 3 snap connections which fasten the base 2 snap connections in the front part and 1 snap connection in the rear part.

Remove the base.
Remove the cover (item 1) of the body (item 3) by undoing its snap tabs through the 4 openings near the jar coupling.
Drive coupling (item 2) can now be loosened with the help of a hammer and a screwdriver. Hit the screwdriver with a short sharp blow of the hammer and remove the drive coupling clockwise.
Grasp the end of the motor shaft and turn the motor anticlockwise. Disconnect the motor wires.

Inspection after repair.
Test the safety interruptor by mounting and dismounting the jar while the appliance is switched on.
Make sure that the speed switch operates properly in all speed settings.

After the product has been repaired, it should function properly and has to meet the safety requirements as laid down officially established at this moment.

Published by Philips Domestic Appliances and Personal Care Printed in the Netherlands © Copyright reserved Subject to modification

4322 277 00071
02/04
PCS 101 289

PHILIPS

1	4822 441 31341	Cover drive unit
2	4822 690 40302	Fan coupling
3	4822 441 31364	Top housing
4	Not available	
7	4822 532 61264	Motor buffer
8	4822 361 30444	Motor 220 - 230 V
	4822 361 30448	Motor 120 - 127 V
9+10	4822 276 13585	Safety system
10	4822 277 21774	Safety switch
12	4822 441 31345	Lower cover
13	4822 441 31347	Bottom housing
14	4822 321 10364	Flex (standard)
15	4822 528 20789	Driven coupling
16	4822 532 52643	Sealing ring
17	4822 690 40299	Knife unit
18	4822 273 10293	Switch and wires
21	4822 441 31335	Cap of jar
22	4822 441 31334	Lid of jar
23	4822 418 40975	Cil. jar
-	4222 000 87410	Direction for use

HR 2934

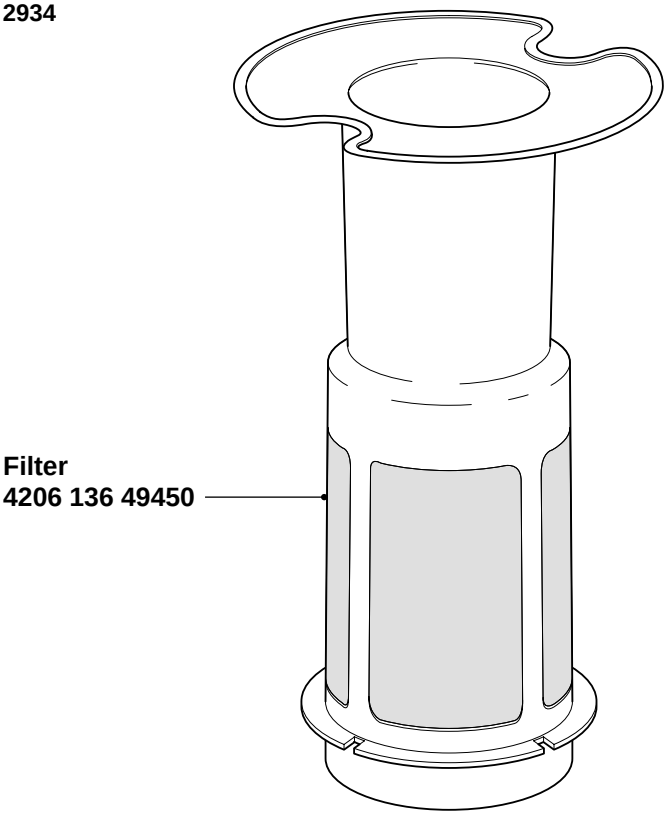

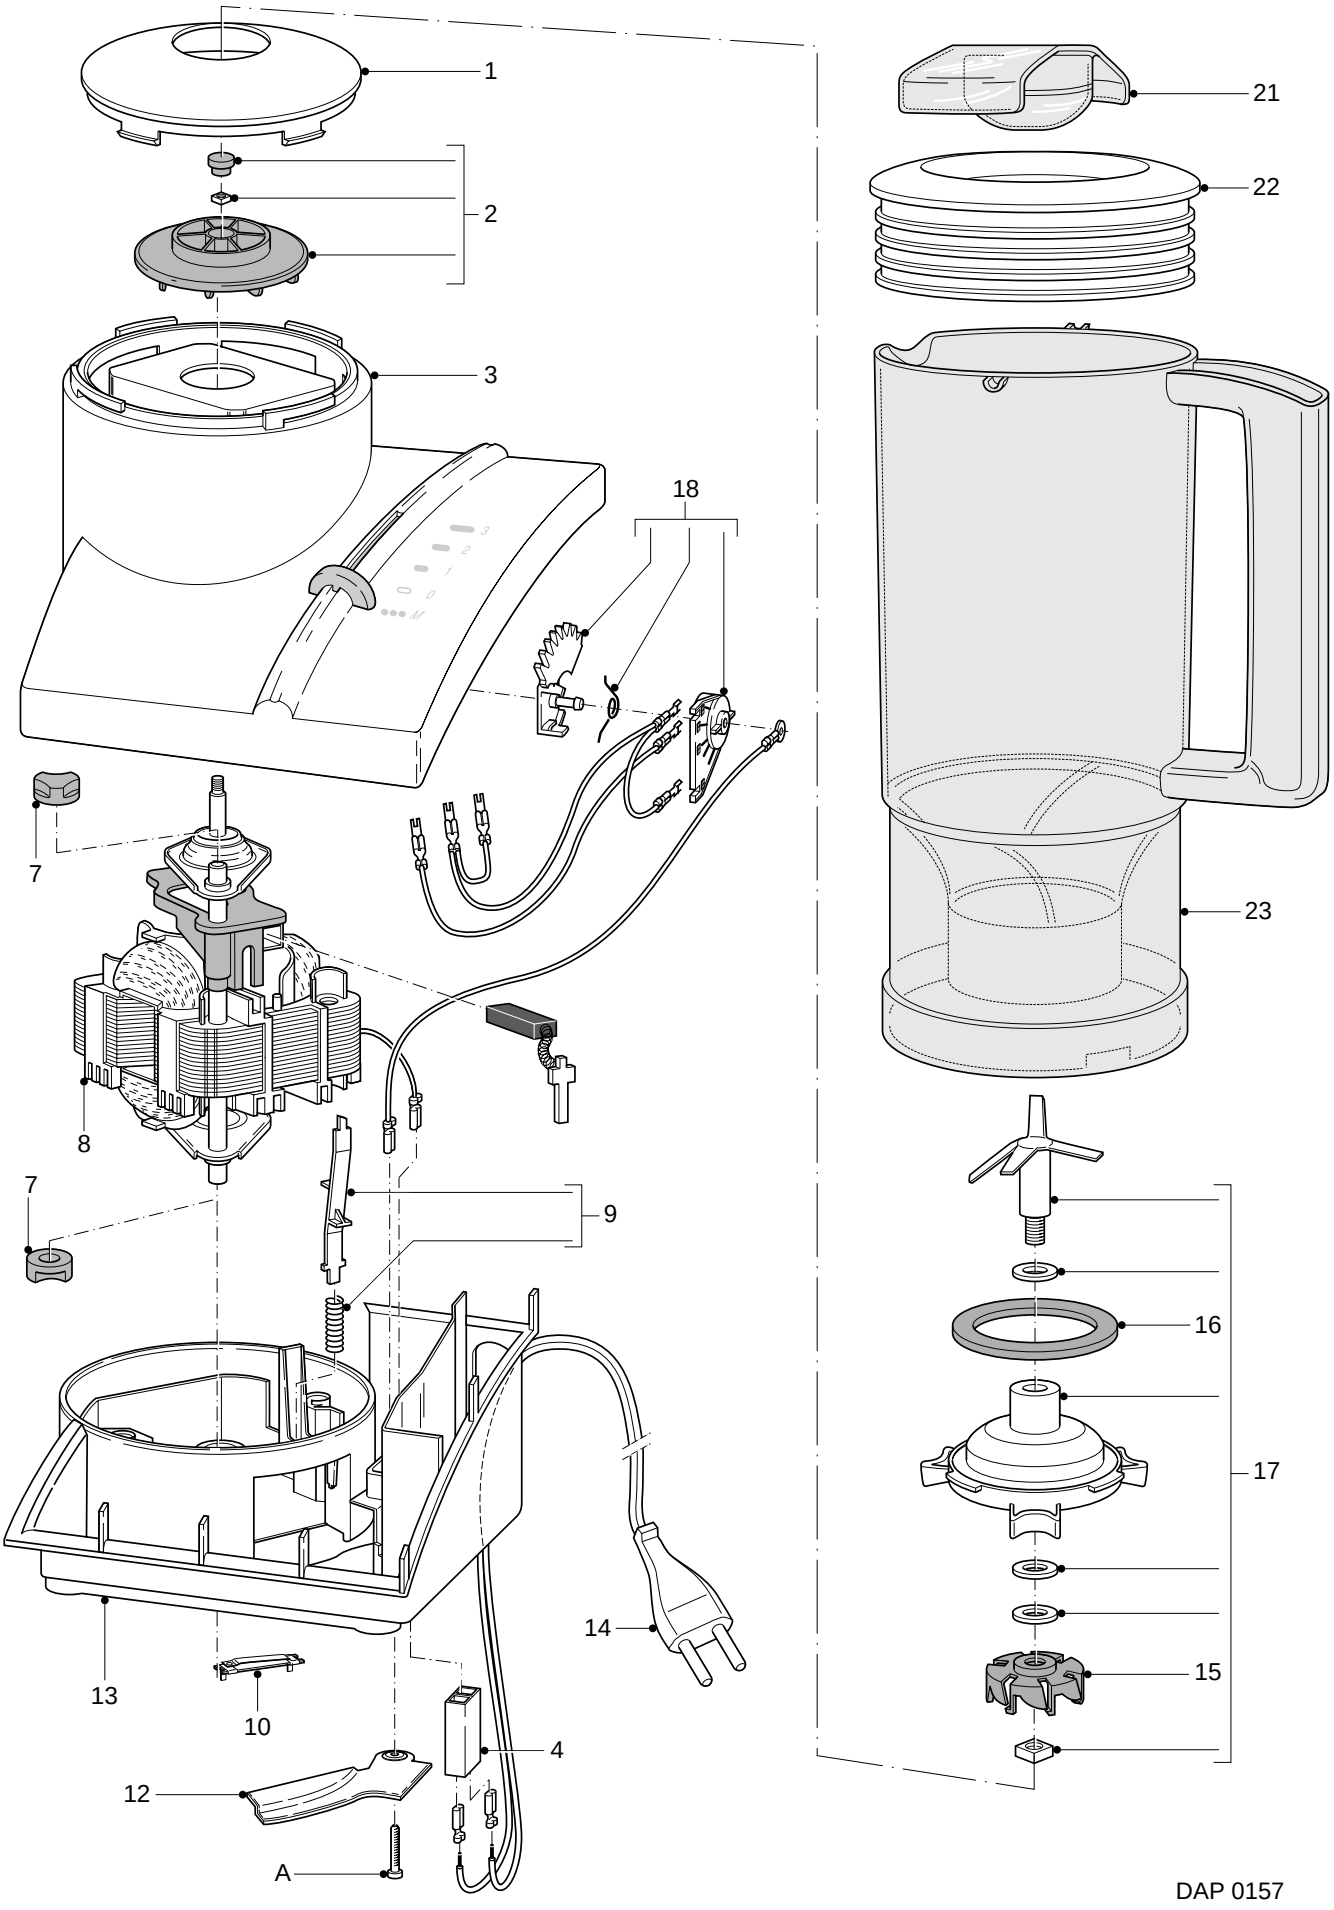

DAP 0157

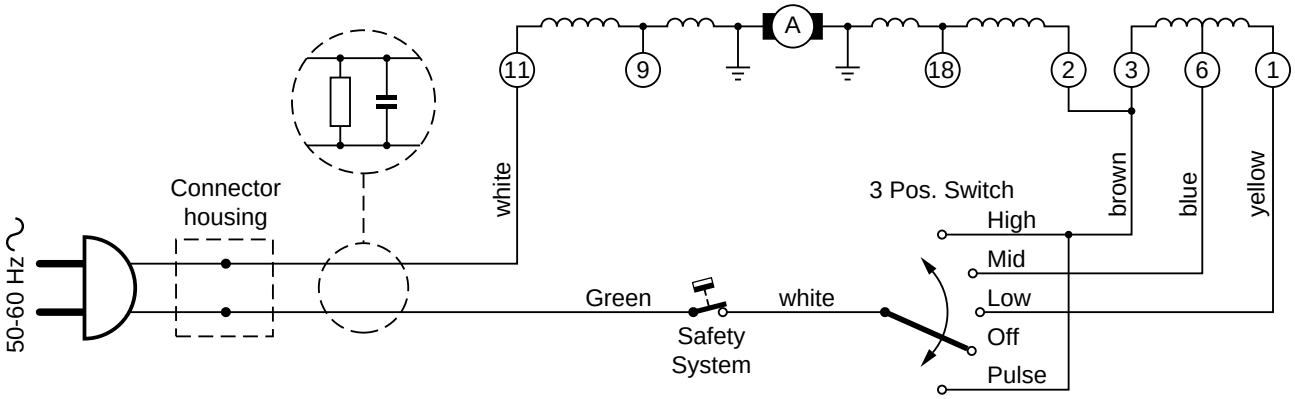
A
11
9
18
2
3
6
1
white
brown
blue
yellow
Connector
housing
3 Pos. Switch
High
Mid
Low
Off
Pulse
50-60 Hz
Green
white
Safety
System

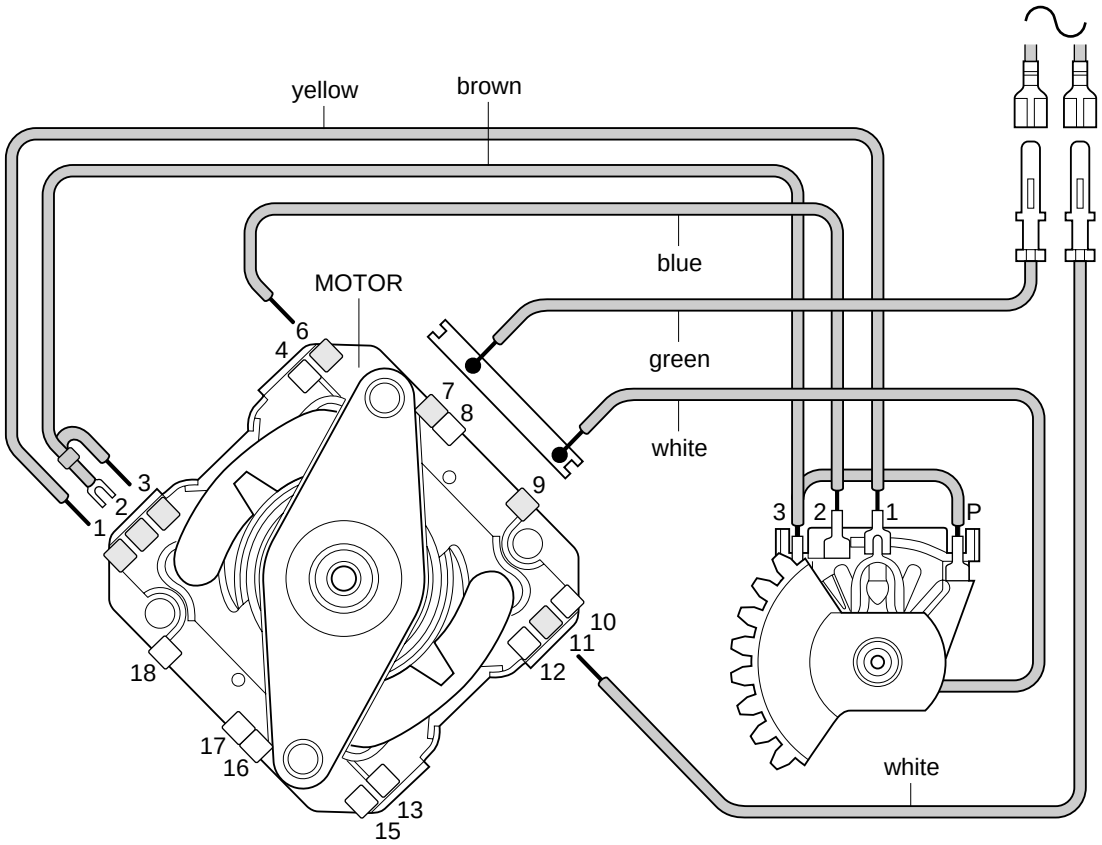
yellow
brown
blue
MOTOR
green
white
white
6
4
7
8
9
3
2
1
18
17
16
13
15
12
11
10
3
2
1
P